 


Height Adjustable Desk

User Manual

Model: ALT3

1. Buttons

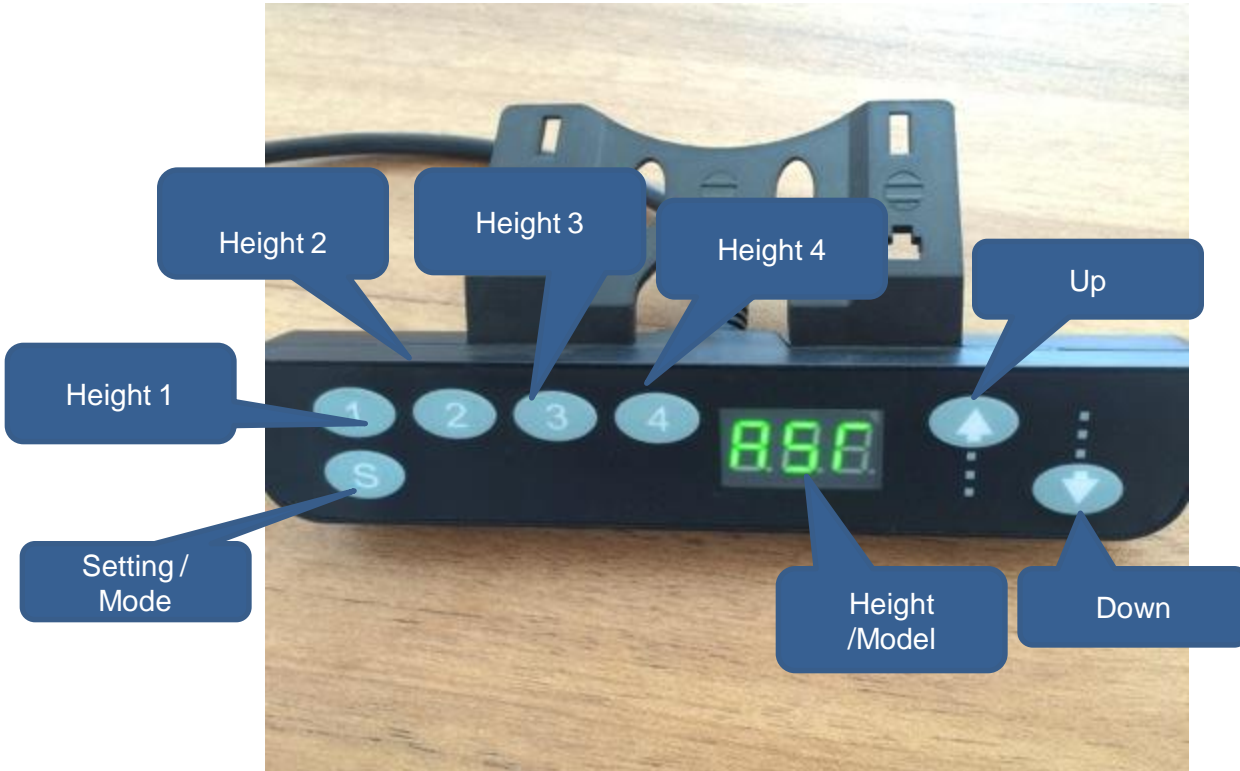

If you controller is a different model,
Such as this one:
“M” will be the function button same
as “S” on the controller on the right



 
2.Reset

2.1 The original setting will show “ASF”. Press “down” to reset.

Please noted when you first use the desk, you will need to reset it. When there is a disruption on the power, reconnect to the power, we will suggest you to reset it.



2.2 Keep pressing “down”, the desk will move slower than in normal status.

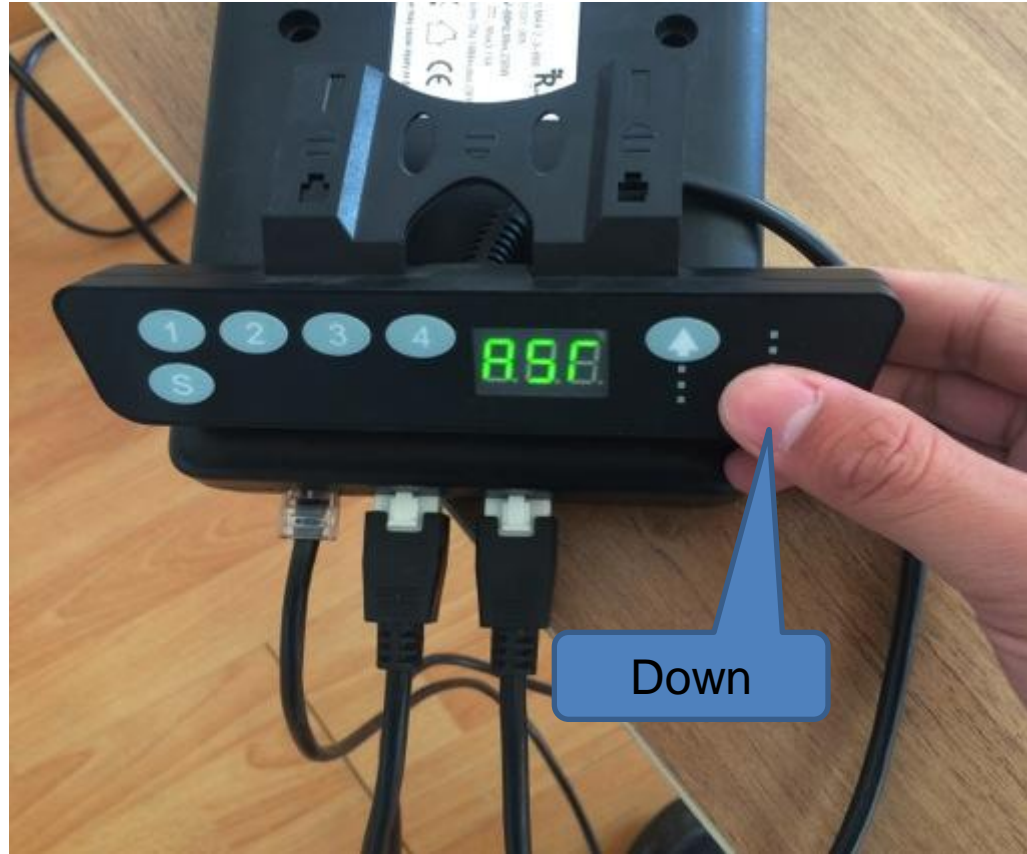

2.3 Keep pressing down until the desk reaches its lowest position and bounced back, hold it, until the desk shows the lowest position, release, the reset completed.



3. Error Codes and Solutions

Alarm Code	Note	Solution
ASF	Origin position unconfirmed	Press and hold "down" to the lowest position to reset
E04	NO.1 leg overload	Stop moving, check if there are any obstacles, remove obstacles and rest.
E05	NO.2 leg overload	Stop moving, check if there are any obstacles, remove obstacles and rest.
E06	NO.3 leg overload	Stop moving, check if there are any obstacles, remove obstacles and rest.
E01	NO.1 leg Communication Abnormal	Check if the power cord of the leg connected and if it is loose, fix it and reset
E02	NO.2 leg Communication Abnormal	Check if the power cord of the leg connected and if it is loose, fix it and reset
E03	NO.3 leg Communication Abnormal	Check if the power cord of the leg connected and if it is loose, fix it and reset
ERO	Overheating protection	Turn off the power restarted after a minute; or wait for 10 minutes.

4. How to reset when there is no ASF displayed?

Keep pressing “S/(M)” and “Down” button, Wait for 18 -25 seconds, the system will automatically enter into “ASF” reset mode.

Then press down until the desk moved to its lowest position and bounced back, shows the lowest height.

5. Set up memorized Height

1. Move the desk to the height you want, and stop
2. Press “S/(M)”
3. Press the one of the numbers (1,2,3,4). For example when you press “1” it will shows “ S-1”, the position been set up on “1”, whenever you press “1”, it will move automatically to the position.
4. The memorized function can set “1”, “2”, “3” and “4” , four different positions. It can be reset, the new position will cover the old one automatically.

6. Anti-Collision

Put an accident force (around 5kg force) against the desk while it is moving up, the desk will stop moving up and will bounce back to the opposite direction for about 5cm.

Same when the desk moving down.

Note: anti-collision will work after the desks has been moved up or down for at least 5cm . (This is to avoid the current to affect the function)

7. “cm” and “ inch” switch

Press “S/M” and “Up” at the same time, and hold it for about 18 seconds, switch between “cm” and ‘inch”

Thanks!